August 14th, 2017

ArcBiox[™] materials are biodegradable glass fiber reinforced^{*)} or unreinforced composites. These high performance biocomposites provide sustainable green alternatives for demanding technical applications.

*) The proprietary fiber technology of Arctic biomaterials Oy is based on Long Fiber reinforced Thermoplastic (LFT) technology.

ArcBiox™ KA4

Unreinforced impact modified PMMA/PLA blend for injection moulding applications

- ✓ PLA is made from 100% renewable resources
- ✓ Bio sourced content 20%
- ✓ Good flowability
- ✓ Excellent flatness & dimensional stability
- ✓ Good surface quality and colouring

Property	Typical value	Test method		
Density	$1.2 ext{ g/cm}^3$	ISO 1183 A		
Tensile strength	58 MPa	ISO 527		
Tensile strength at break	40 MPa	ISO 527		
Flexural strength	99 MPa	ISO 178		
Flexural Modulus	3000 MPa	ISO 178		
Izod impact strength	$47 ext{ kJ/m}^2$	ISO 180		
Izod notched impact strength	5,4 kJ/m ²	ISO 180/A		
Heat Deflection Temperature HDT/B	75 °C	ISO 75		
Vicat / B50	79 °C	ISO 306		

The properties stated above are not for specification purposes. **Parts moulded to 50 °C mould.**


ArcBiox™ KA4 is a possible alternative for applications where currently unreinforced resin like SAN, PS, ABS are used.

August 14th, 2017

Best Practices: Injection moulding of ArcBiox™ PMMA/PMA blends

Drying

ArcBiox™ materials must be always dried before processing with dehumidifying dryer, due to fact that insufficient drying before processing will cause loss of mechanical properties. Please note that a combination of a very long drying time and high temperature may cause degradation and agglomeration of pellets and may cause yellowing.

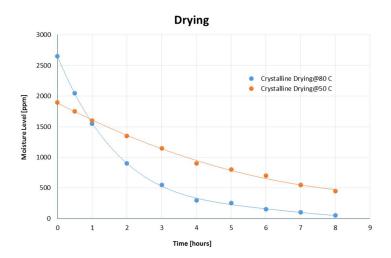

Moisture content of less than 0.025% (250 ppm) is recommended to prevent loss of mechanical properties.

Recommended drying time 80 °C 4-5 h

In order to avoid moisture pick-up during processing, the following points should be followed:

- Remaining granules should be stored in air-tight containers
- Residence time inside the hopper should stay below 1 hour
- Dry-air filters should be used in hot-humid climate conditions
- Do not open cold material containers inside normal temperature environment as the granules will act as condensation points (bring containers into production some hours before use)
- Empty machine hopper and store material air-tight in case of production stops

Screw & barrel

When using ArcBiox[™] unreinforced grades wear protected conventional 3-zone screws with L/D-ratio between 18:1 and 22:1 and low compression ratio of 2:1 to 2.5:1 are recommended. Proposed flight depth for metering zone is at minimum 3.5 mm and for feed zone 7.5 mm.

Nozzle

General purpose nozzle tips are recommended. The configuration of the bore of the nozzle should closely correspond to the screw tip and the diameter of the nozzle bore must be slightly smaller than the outer sprue bush diameter to allow demolding of the sprue and runner.

Hopper & other connections selection

The hopper should have, preferably, a discharge angle of at least 45°, better 60 °C, flat bottoms and long transition tubes to the feed throat must be avoided. Small feed throat diameters and safety bars, magnets or other inserts can lead to flow stagnations. Allow at least 15 mm free space for the pellets to move. All inside seams must be flush, circular sections are preferred over rectangular flow channels.



ArcBioxTM KA4 Preliminary technical data sheet

August 14th, 2017

Tooling

Due to low shrinkage of material draft angles need to be higher. Following table should be considered in part design on visual surfaces.

VDI 3400 ref	12	15	18	21	24	27	30	33	36	39
Ra (µm)	0.4	0.56	8.0	1.12	1.6	2.24	3.14	4.5	6.3	9
Draft angle	1.5	2	2.5	3	3.5	5	4.5	5	5.5	6

Gate should be located in thickest section of the part and recommended size is $0.8 \times 1.8 \times 1.8 \times 1.8 \times 1.0 \times 1.0$

Processing Parameters

Purging / Cleaning of screw

Melt Temperature	220 - 230 °C
Feed Throat	30 - 50 °C
Feed Temperature	200 - 220 °C
Compression Section	210 - 230 °C
Metering Section	220 - 240 °C
Nozzle	220 - 240 °C
Screw Speed	medium
Back Pressure	5-10 bars (0.5-1.0 MPa)
Change-over point	Change-over point should be always checked visually by setting holding pressure to 0 bar/MPa to avoid over filling and flashes. Part should be 95-98% filled before changing to holding pressure.
Holding pressure	60% of max injection pressure

DISCLAIMER: The product(s) mentioned herein are not intended and are restricted to be used for medical, pharmaceutical or healthcare applications. Determining the suitability of these materials for any applications, complying with legal requirements for any such applications, are the sole responsibility and obligation of anyone purchasing these materials for such applications. The information in this Data Sheet is given according to our best knowledge at the date shown in footer. The information is guidance for safe handling, use, processing and storage. This data sheet is for informative purpose only and all specifications need to be discussed and agreed with Arctic Biomaterials Oy separately.

Use low MFR Polypropylene to clean the screw and barrel

ARCTIC BIOMATERIALS OY MAKES NO WARRANTY, EXPRESS OR IMPLIED, REGARDING THE INFORMATION CONTAINED HEREIN OR ITS PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY WARRANTY AS TO ACCURACY OR COMPLETENESS OF INFORMATION, OR ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.